

V-2

USER MANUAL



UM_EN

Part No.: 1764025_02

CREM®

CONTENT 2

GENERAL..... 3

Introduction3

Warnings.....3

Precautions4

Intended use.....4

Facts & weight5

OVERVIEW OF COMPONENTS 6

Function6

INSTALLATION AND START-UP 7

Positioning7

Electrical connection.....7

Turn on the hot plates.....7

CLEANING AND CARE8

Daily cleaning.....8

Fault and solution.....8

ELECTRICAL DIAGRAM..... 9

EXPLODED VIEW10

DIMENSION SKETCH11

Some important information may appear in textboxes seen below

**IMPORTANT!**
INFO.

**CAUTION!**
INFO.

More INFO.

Note INFO.

Introduction

Thank you for choosing a V-2 glass decanter heater. We hope you enjoy it !

- Read the user guide before using the appliance.
- This guide contains important instructions for proper and safe use of the appliance.
- Always keep this guide close at hand for future reference.

Warnings

- Never immerse the appliance, plug or mains cable in water because there is a danger of electric shock.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Do not use the appliance if the mains cable, plug is damaged or the appliance has fallen down.
- If the mains cable is damaged it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
- Only plug the appliance into a properly installed earthed safety socket whose line voltage matches the technical data for the appliance.
- This appliance shall not be installed where the public has access.
- The appliance is not to be cleaned with a water jet or a steam cleaner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- These appliances are intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries and butcheries, but not for continuous mass production of food.
- **Only for Europe:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Precautions

- Do not use the appliance outdoors so it can be exposed to weather (rain, snow, frost). It will cause material damage to the appliance.
- Do not try to open the appliance or repair it in any way. To avoid danger only have the appliance repaired in a technical workshop, Service Centre or by a qualified person.
- Remove the mains cable from the socket when the appliance is not in use for longer periods. To do this, pull the plug not the cable.
- This appliance must be placed in a horizontal position which is resistant to any water that may leak.
- Place the appliance out of the reach of children.
- Position the mains cable so that people cannot trip over it. Keep it away from sharp edges and heat sources.
- This appliance must not be cleaned by a water jet.

Intended use


- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops.
 - Offices and other commercial working environments.
 - On agricultural estates.
 - By clients in hotels, motels and other residential type environments.
- For the optimal performance of the appliance these parameters shall not be exceeded:
 - Maximum working temperature: 40°C
 - Minimum working temperature: 10°C

Facts & weight

FACTS	V-2
Height, Width, Depth	62mm, 359mm, 198mm
Hot plates	2
Heatup time	1.5min
Power supply	220-240VAC 1N~165W 50-60Hz

MODEL/NAME	V-2
Weight	2.5kg

Function

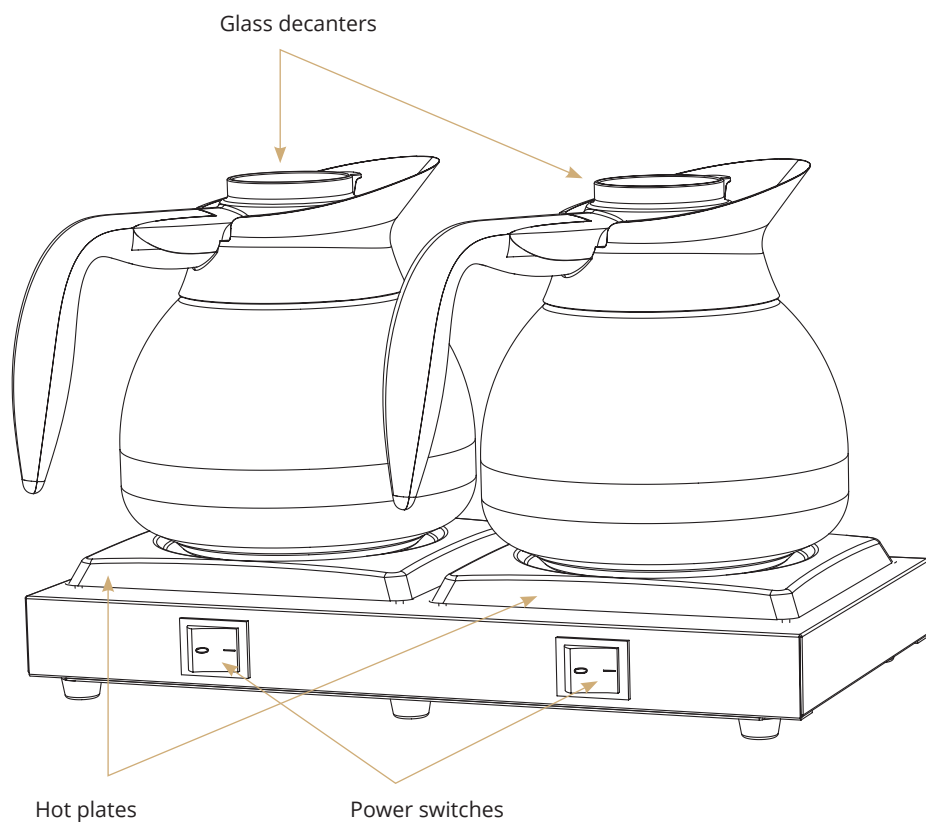


Positioning



- Position the V-2 on a flat and waterproof surface.


Electrical connection

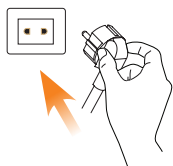

- **IMPORTANT!**

Connect the plug to a separate earthed wall socket.
220-240 V 50-60Hz, 10 Amp.

Turn on the hot plates

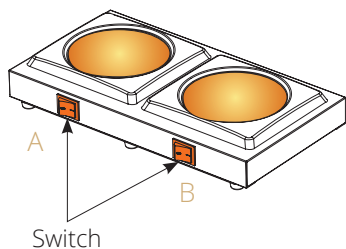

- Turn on left hot plate by pressing switch (A).
- Turn on right hot plate by pressing switch (B).
- Ensure that the hot plates gets warm.
- Place the glass decanters on the hot plates.

Tips for best quality

- Stir the brewed coffee in the decanter before serving.
- Do not mix freshly brewed coffee with old coffee that have been kept warm for longer periods.

Daily cleaning




CAUTION!

WARNING: Appliances shall be disconnected from their power supply during cleaning or maintenance and when replacing parts.




CAUTION!

The plates can be warm!

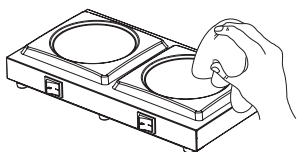

- Clean the external surfaces with a damp cloth in order to keep it clean.

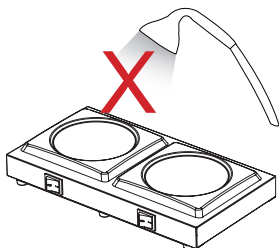

CAUTION!

The V-2 should not be submerged in water or washed in a dishwasher.


Fault and solution




IMPORTANT!

All maintenance and installations must be done of an authorized technician.

FAULT	POSSIBLE SOLUTION
Hot plate does not become warm although switch is on.	■ Check plug connection to wall socket. ■ Check the fuse. ■ Check connection to switch. ■ Check connection to hot plate. ■ If hot plate is defective, replace.

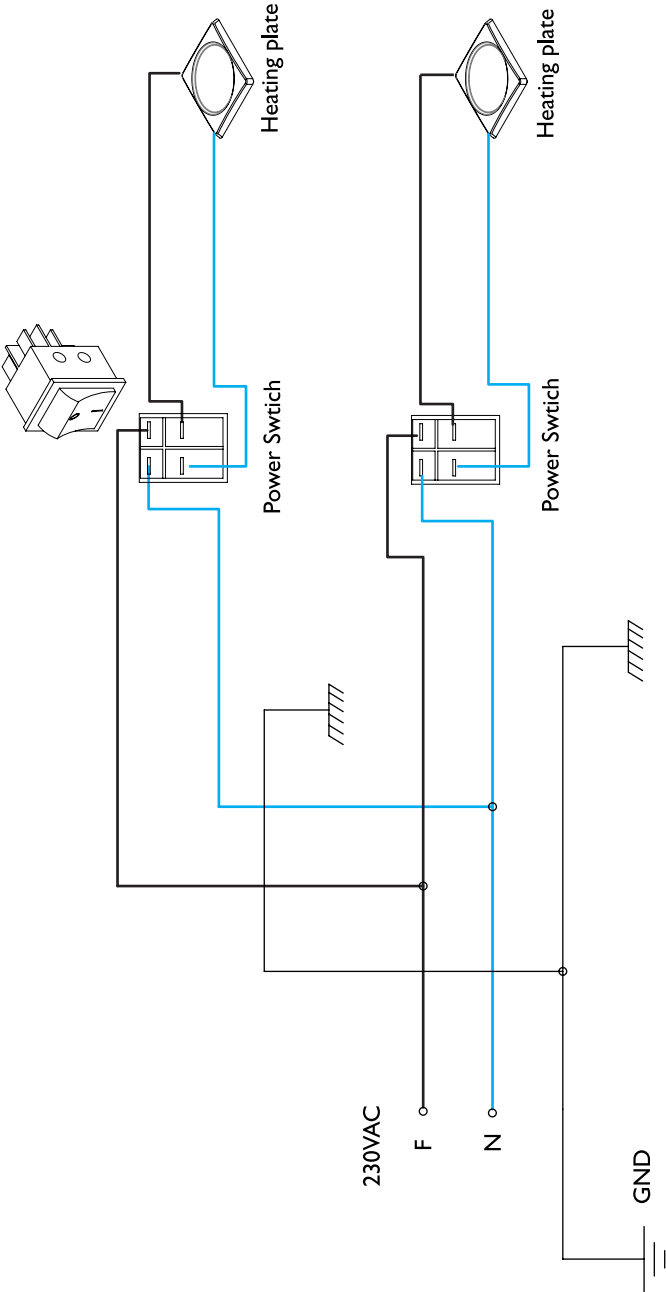


V-2

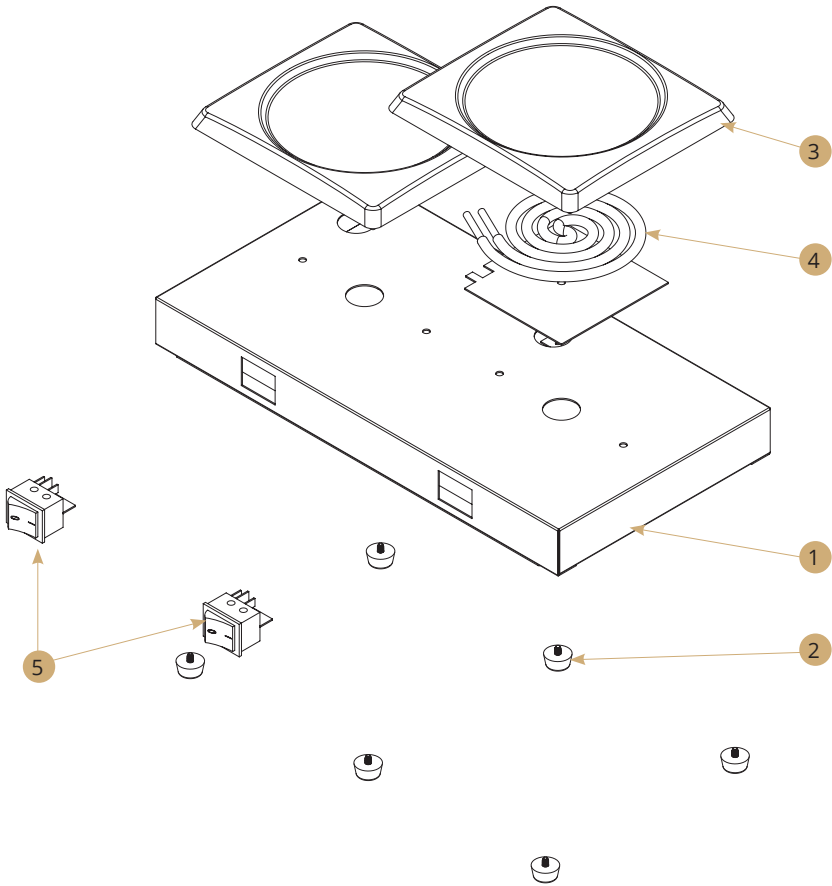

Spare parts list

POS.	Amount/ Unit	Part No.	Description
1	1	1011101	Chassi V-2
2	6	120320	Rubber Feet
3	2	1303001	Hot Plate
4	1	160101	Element 78W 230V
5	2	C60900043	Power Switch Black

V-2

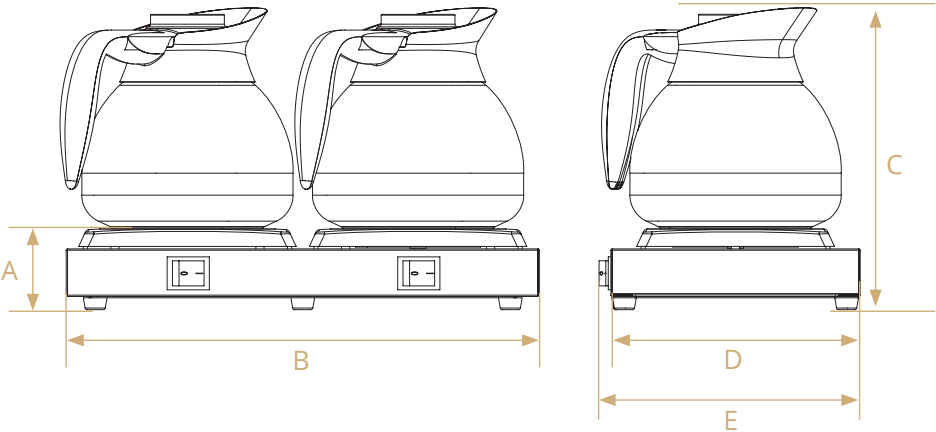

Model	A	B	C	D	E
V-2	62mm	359mm	230mm	189mm	198mm

For the warranty to be valid the conditions for maintenance must have been followed according to our instructions, proper precaution has been made and warranty claim been issued without delay.

The affected equipment may not be used during awaiting service if there is any risk that the damage or defect would worsen.

The warranty will not cover consumption supplies such as glassware, normal maintenance such as cleaning of filters, contaminations in water, lime, incorrect voltages, pressure or adjustment of water amounts.

The warranty will not cover damages of defects caused by incorrect handling and operation of the appliance.

FOR SERVICE

Please contact your dealer

Your Dealer

CREM[®]

crem.coffee